

Thank you for purchasing **the Crispy Rice Cooker**! We look forward to delivering you absolute deliciousness! Before using this product, it is important to read this instruction manual carefully.

Although we have designed **the Crispy Rice Cooker** to be the most versatile appliance in your kitchen, it is important to use the product only as described and for its intended purpose. Keep this manual for quick reference, not only because it looks nice.

Important Safeguards

The Crispy Rice Cooker is for household use only. When using electronic appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against electronic shock, do not immerse cord or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Unplug from the outlet when not in use and before cleaning.

Allow to cool before putting on or taking off parts.

- Never operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged any manner. Call our customer care department for examination, repair or adjustment.
- The heating surface is subject to residual heat after use.
- Do not use outdoors
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place this appliance near a hot gas or electronic burner, or in a heated oven.
- Extreme caution should be used when moving this appliance with hot oil or hot liquids.
- To operate, plug cord into wall outlet. To disconnect, turn any control to “off” then remove plug from wall outlet.
- Do not use appliance for other than it intended use.
- Longer extension cords may be used if care is exercised in their use.

- When electrical cords are used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the cord should be arranged so that it will not drape over countertops or tabletops, where it can be pulled on by children or tripped over unintentionally.
 - Never immerse the appliance or power cord in water, please refer to the care instructions.
 - This appliance is intended for household use only. - NOT FOR SPACE HEATING PURPOSES
 - Appliance can be used by persons with reduced physical, sensory, or mental capabilities if they have been given supervision instruction concerning use of the appliance in a safe way and understands the hazards involved.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Preheating of the appliance is not necessary
- a) A short detachable power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- "Any other servicing should be performed by an authorized service representative."
- **WARNING**** Do not misuse The Crispy Rice Cooker for other than its intended use to avoid potential injury

****WARNING**** Surfaces are liable to get hot during use.

Overview

The Crispy Rice Cooker

1. digital display panel
2. glass lid (Removable)
3. Open and close cover

FEATURES

- Dimensions 295×290×100 (MM)
- 600W
- 120 Volts
- Designated Crispy Mode
- Capacity of oil: 1.2L
- Capacity of rice: 1-4 cups
- Removable lid
- Non-stick oil pan
- Highly effective filter and sensor system
- Ergonomic touch handle
- New design for glass viewing
- Compact and easily stored

OPERATING INSTRUCTIONS

- If you are using your **Crispy Rice Cooker** for the first time, you must:
 - Remove **The Crispy Rice Cooker** from the box and remove all packaging surrounding the product.
 - Remove all printed documents and any other documents from the basket.
 - Clean the crispy basket and cooking pot with hot water, a small amount of dish washing liquid and a non-abrasive sponge or cleaning cloth.
 - Always keep the bottom of the cooking pot clean, as well as the heating plate clean so that they do not accumulate foreign substances. Otherwise it will lower the heating efficiency and shorten the life of **The Crispy Rice Cooker**.
- Do not operate this appliance without the cooking pot in place.
- Dry the unit thoroughly before using.
- Select a location for **The Crispy Rice Cooker**. The location should be on a flat counter where the plug will reach an outlet.

·DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.

Using Your Crispy Rice Cooker

1. Fill the unit with the desired amount of oils, liquids and ingredients.
2. Switch on with the power light coming on.
3. Press start to automatically go to boil mode, and the boil light will come on.
4. If you desire to switch into the crispy mode only, hit the “-“ button as soon as the device comes on in boil mode. You will hear a beep to confirm the switch of modes. A maximum of 30 minutes can be set in the designated Crispy Mode.
5. If you do not wish to skip the boil mode, the device will automatically boil for 15+ minutes depending on the oil and water levels before automatically switching into Crispy Mode. The predetermined Crispy time is 15 minutes. It will decrease automatically, unless you wish to increase the Crispy Time (push the +/- to increase or decrease the Crispy time). A maximum of 20 minutes can be applied to crispy mode once switching from boil mode. The timer on the device will automatically decrease.
6. Once the operation has finished, the device will automatically shut off. Allow ingredients and cooker to cool down for a few minutes before opening the lid to remove items. Enjoy!

WARNING

The levels must always be between the maximum and minimum levels indicated. Never use The Crispy Rice Cooker when the oil is below the “min” level as it could cause the thermal safety device to come into operation; to replace it you need to contact one of our service centers.

·Use only a good quality oil. We recommend vegetable oil. The use of butter, margarine, olive oil or animal fat is okay but won't yield the best results. (For Rice Use)

Cleaning and Storage

· Make sure that the appliance has been unplugged and completely cooled down. Open the lid, noting that the glass lid itself is removable and dishwasher safe. We recommend using a soft cloth with warm water to hand wash the inside of the lid and pan once the device is safely cool and unplugged. Wipe under the pan after multiple uses to ensure a longer operational life for the device. Enjoy your Crispy Rice Cooker!